



Brew Cup Refilling System Use & Care Instructions

Model 101




Refilling System Components:

Hopper Container with Lid, Hopper, Doser and Locking Clip. Base with Funnel, Brew Cup Adapter Bracket and Overflow Spout. 2-Sets of Brew Cup Adapters (one each for the dispenser and for the cleaning wand). Cleaning Wand.

Using Your Brew Cup Refilling System:


Before your first use, we recommended that you thoroughly clean your brew cup refilling system. Refer to "Disassembling and Cleaning The Dispenser" instructions.

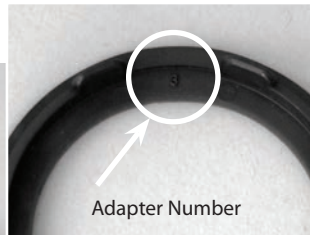

Installing Brew Cup Adapters

Brew cup adapters allow this system to work with all the popular brew cups on the market. There are two sets of brew cup filter adapters - each adapter is numbered 1, 2 or 3. The adapters can be identified by locating the number embossed on the (front) of the adapter. Select the adapter for the refillable brew cup you are using:

- Adapter 1 for My K-Cup®
- Adapter 2 for ekobrew®
- Adapter 3 for Solofill®, Café Cup® and similar filters

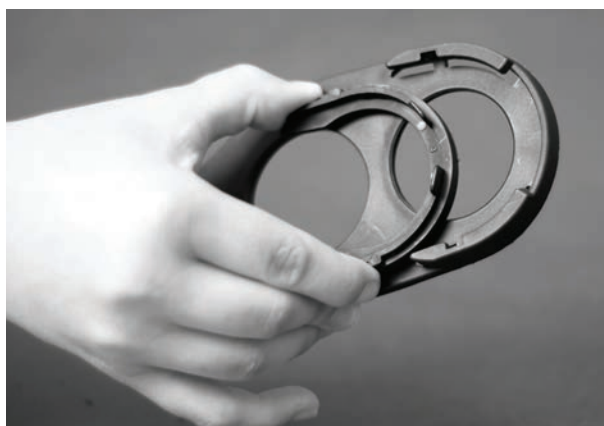

Insert Adapter Into Cleaning Wand

- Hold the cleaning wand bracket side up, insert the adapter into the cleaning wand bracket by gently squeezing the ends of the adapter together and sliding the adapter into the bracket.
- Align the ends of the adapter with the ends of the bracket. When inserted correctly the locking tabs will click into place.



Insert Adapter Into Base Of The Dispenser

There are two sets of brew cup filter adapters - each adapter is numbered 1, 2 or 3. The adapters can be identified by locating the number embossed on the (front) of the adapter. Select the adapter for the refillable brew cup you are using:

- Adapter 1 for My K-Cup®
- Adapter 2 for ekobrew®
- Adapter 3 for Solofill®, Café Cup® and similar filters
- With the flat side of the adapter up, gently squeeze the ends and slide the adapter into the bracket of the dispenser, located on the underside of the funnel in the base.
- Align the ends of the adapter with the ends of the bracket. If inserted correctly the locking tabs will click into place.

Using The Dispenser



- Open the lid of the brew cup filter and insert it into the adapter in the dispenser.



- Remove the lid of the dispenser and pour your favorite ground coffee into the hopper.



- Make sure the doser is in the upright position and is full. If necessary, tap the sides of the dispenser to make coffee fall into the doser.



- Turn the doser clockwise 180° to dispense coffee into the brew cup filter. Return the doser knob to its starting position by rotating counter clockwise 180°.
- Remove the brew cup filter, close the lid, and insert the brew cup filter into the coffee brewer.

Using The Cleaning Wand

Caution: The brew cup may be hot when removed from the coffee brewer.



- Remove the brew cup filter from the brewer and open the lid.



- While holding the cleaning wand bracket side down, slide the brew cup filter into the adapter bracket as far as it will go. If you are using a brew cup filter with a hinged lid, the lid of the brew cup should line up with the second hole of the cleaning wand.



- Strike the heel/neck of the cleaning wand on the edge of a waste receptacle to remove grounds.



- If necessary, with the brew cup still in the cleaning wand rinse the brew cup under running water.

WARRANTY

Single Cup Accessories, Inc. warrants this product against any and all manufacturing defects. Should this product fail to perform to the manufacturer's specifications, Single Cup Accessories, Inc. will replace or repair the product at no cost to the purchaser. This warranty does not apply to "every day wear and tear", damage caused by misuse or damage caused by rough handling. Contact us about warranty concerns through our website or call our toll free number.

Disassembling And Cleaning The Dispenser



- Separate the hopper container from the base by holding the base and twisting it counterclockwise 1/8th of a turn.
- Remove the lid from the hopper container.
- Turn the hopper container upside down and set it on the counter top.



- Locate the locking clip in the base of the hopper. Gently press the locking tabs together and lift up to remove the locking clip.
- Remove hopper by pulling it out of the hopper container. Then slide the doser out of the hopper.
- Clean all parts with mild soap and warm water. Do not use abrasives on this product.
- This device is **not** dishwasher safe.

Assembling The Dispenser After Cleaning



- **Dry thoroughly before reassembling.**
- With the hopper container in the upright position, and doser knob in the vertical position, slide the doser into the hopper container.
- Insert the hopper into the hopper container. If the hopper does not fit properly, remove it, rotate 180° and reinsert.



- Turn the hopper container upside down, place on the counter top and insert the doser locking clip. Match the small tab with the small slot and the large tab with the large slot. Push the locking clip down until the tabs click into place.
- Reattach the hopper container to the base by slightly offsetting the two pieces. Twist clockwise to lock the hopper container into the base. Replace the lid.



Single Cup Accessories, Inc.

Portland, Oregon 97222

1-855-621-1222

www.SingleCupAccessories.com

Designed and assembled in Oregon, USA

PATENT PENDING

©2013 Single Cup Accessories, Inc. (V.1 0913)